

# Timberwolf



# Lone Wolf Timberwolf - Parts of the Gun



Before using this product, carefully read through manual and retain it for future reference. Echo1usa automatic electric guns are intended for ages 18 and above. This product may cause serious injury if misused. Full face protection is required.

## Specifications

|                 |              |
|-----------------|--------------|
| Weight          | 1.8 lbs      |
| Barrel Length   | 95 mm        |
| Overall Length  | 8 inches     |
| Barrel Caliber  | 6.05 mm      |
| Ammo Capacity   | 24 +1 rounds |
| BB Size         | 6 mm         |
| Feet Per Second | 280-330 fps  |
| Power Type      | Green Gas    |



Safety located under the rail.

# Back Strap



The Timberwolf comes with a thick and thin back strap for a custom grip. Press in on the top most section and slide the panel down and replace with the other panel. Make sure it is clicked into place.

# Out of BBs



The slide is locked back since you are out of BBs. Reload or insert another loaded mag and press the slide lock down or pull the slide back to load and get ready to fire.

# Hop Up



To adjust the hop up you will have to remove the slide to get to the adjustment wheel.

Before you start to adjust your hop up make sure you are in a safe and clear area to shoot the Airsoft gun. Must be wearing full face protect for safety.

1. Shoot the gun at your target and see if you need to add more hop for range.
2. Remove the magazine. Pull the slide back to have the internal hammer locked down. Do not pull the trigger.
3. Pull down on both sides of the slide release tabs and push the slide forward to remove.
4. Make the needed adjustment and reverse the steps and test fire and repeat until you get the desired flight path. More info on the Timberwolf product page including a Tech Support video.

# Filling with Green Gas



## To load green gas into the magazine:

Hold the magazine upside down and have the brass fill valve at a 90 degree angle to the nozzle of the gas can and press in. If the gas is loaded at an angle you will see the gas squirt out and will freeze your hands or face so use caution. Press the gas down to charge and load the mag for 3 seconds and then lift up and then again for 3 seconds and that should be full. The magazine will be full for gas when you press the gas in and it squirts back out since there is no room.

You can use some silicone oil to lube the fill valve.

Storing the charged magazine may cause it to leak and you will have to oil it. Keep the charged magazine out of a hot car . Over pressuring will cause damage

# How to use the Magazine

Avoid getting dirt and debris into the magazine this can cause it to malfunction. Only use Echo1USA BBs into your Timberwolf. The use of .12g or 'low grade' BBs will damage your Airsoft Gun and VOID the warranty.



1. With your finger pull the follower all the way down and insert the BBs one by one.
2. Make sure the BBs are in a zig zag pattern to allow more BBs to be loaded
3. Fill with gas and ready to go.

## Operation Tips:

Use caution when mag seems empty.

Dropping the magazine will result in damage and not covered under the warranty. For take down and oiling video visit the Tech Support Channel. Spare parts can be purchased from the Echo1 Parts Shop.

